


| Item | Part # | Description | Qty. |
|------|---------|------------------------------------|------|
| 1. | 1705295 | Motor Reversing Solenoid - 24 Volt | 1 |
| 2. | 1703896 | Solenoid Cover | 1 |
| 3. | 1800783 | Cap Screw - 1/4" x 1 1/2" | 2 |
| 4. | 1800699 | Nylon Lock Nut - 1/4" | 2 |
| 5. | 1800430 | Ring Terminal - 1/4" x 8 Ga. | 4 |

STEP 1: Disconnect wires and remove existing solenoid from configuration. Replace with new 24 volt solenoid 1 as shown in wiring diagram.

STEP 2: Remove existing ring terminals from wires A, B, C and D. Leave existing ring terminal on wire E.

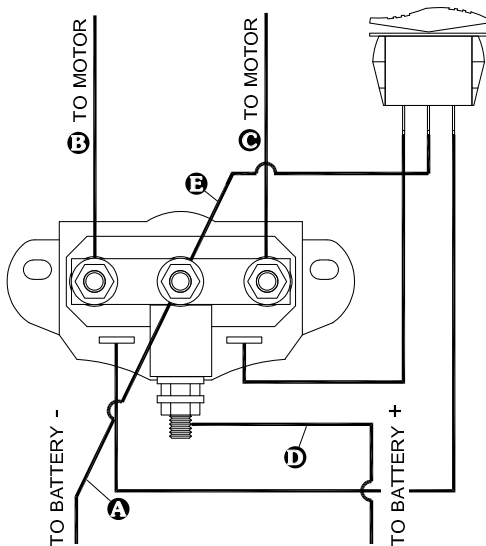

STEP 3: Install new ring terminals 5 on wires A, B, C and D.

STEP 4: Reconnect wires to 24 volt solenoid 1 as shown in wiring diagram.

